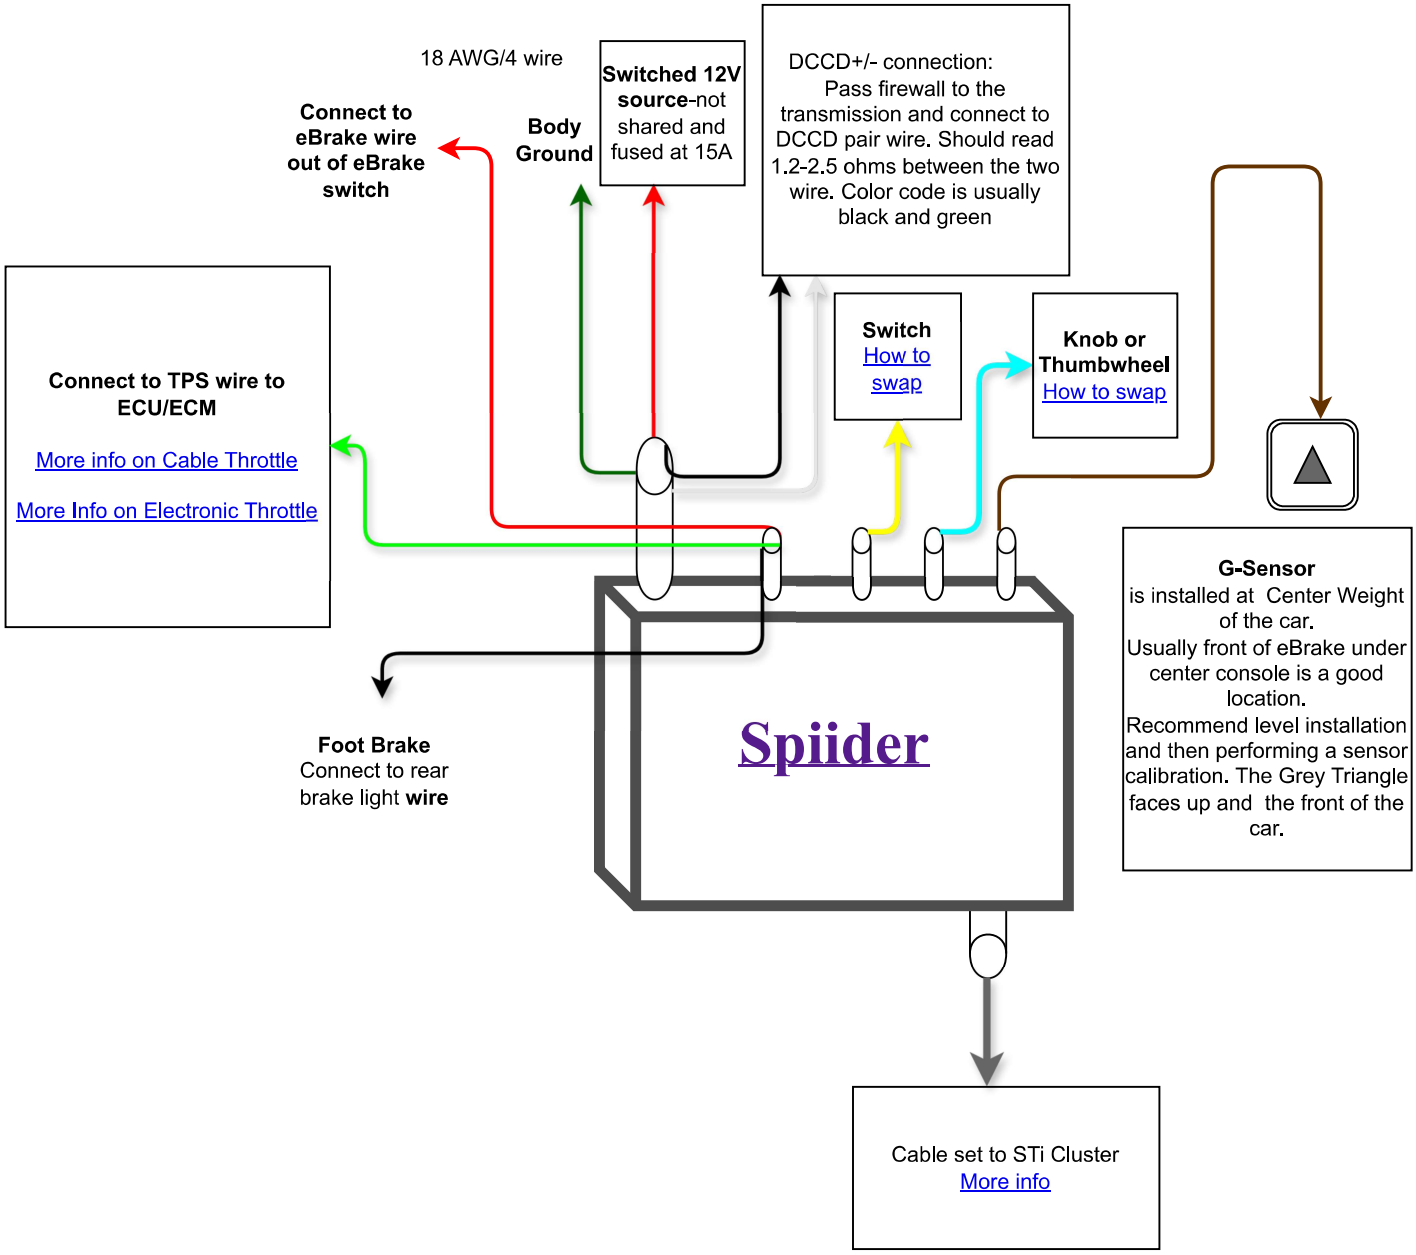
18 AWG/4 wire
Connect to eBrake wire out of eBrake switch
Body Ground
Switched 12V source-not shared and fused at 15A
DCCD+/- connection: Pass firewall to the transmission and connect to DCCD pair wire. Should read 1.2-2.5 ohms between the two wire. Color code is usually black and green
Connect to TPS wire to ECU/ECM
More info on Cable Throttle
More Info on Electronic Throttle
Switch
How to swap
Knob or Thumbwheel
How to swap
G-Sensor
is installed at Center Weight of the car.
Usually front of eBrake under center console is a good location.
Recommend level installation and then performing a sensor calibration. The Grey Triangle faces up and the front of the car.
Spiider
Foot Brake
Connect to rear brake light wire
Cable set to STi Cluster
More info